 



Player 1
(1)

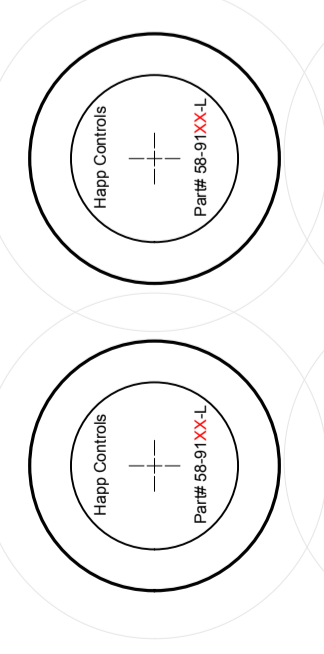


Player 1
Coin Up (5)



 
Player 2 (2)

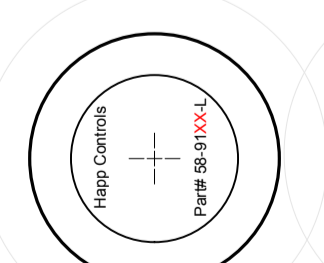



Player 2
Coin Up (6)

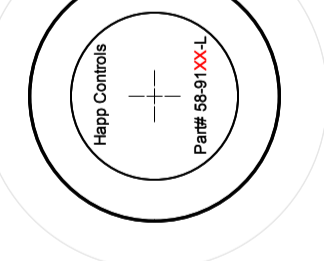 


Left Control

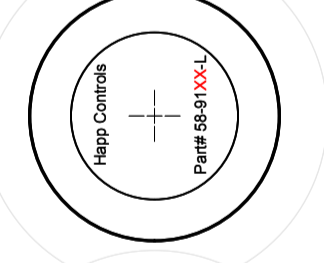 



Left Alt

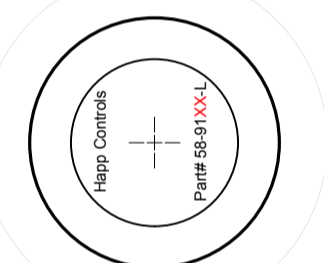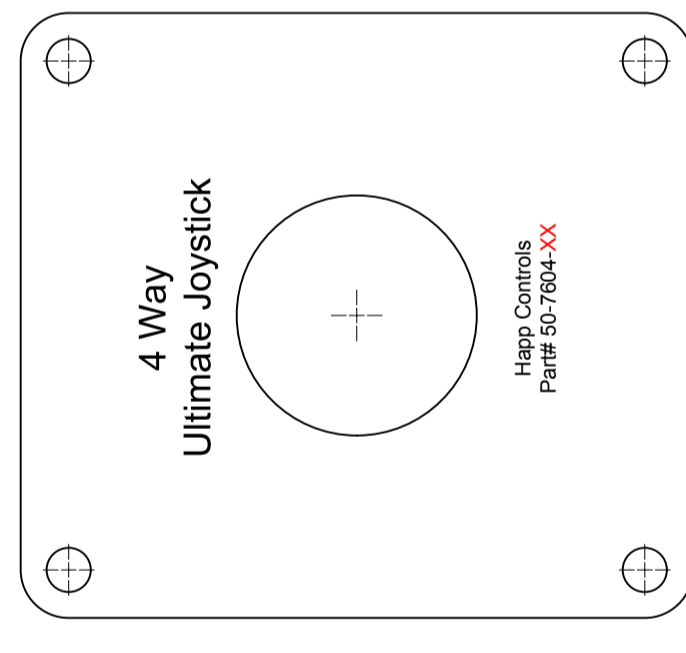  


Left Control

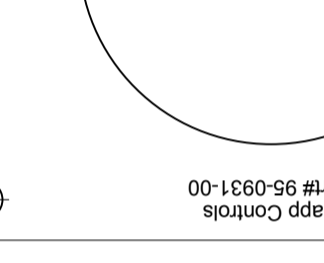 


Left Alt

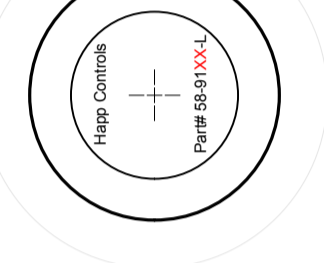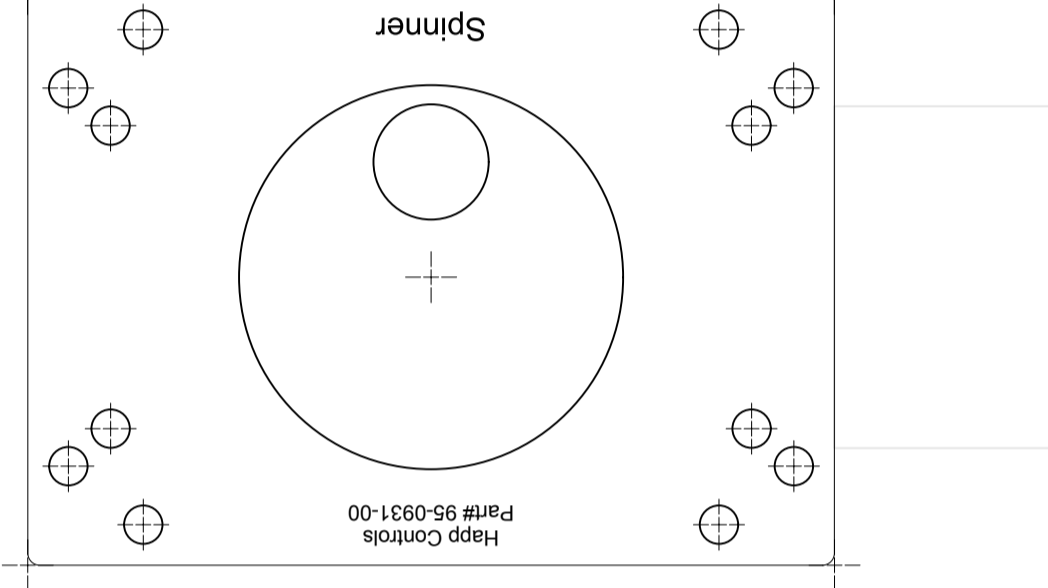  


Left Control

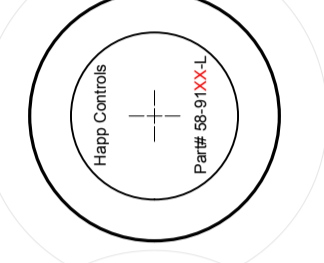 


Left Alt

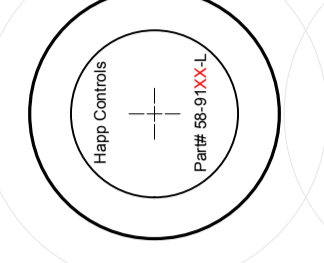 


Enter

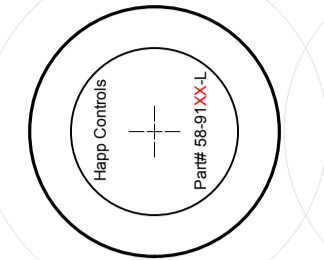 

Esc

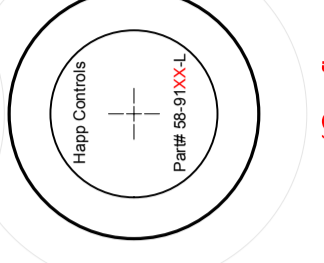 


~ (Config menu)

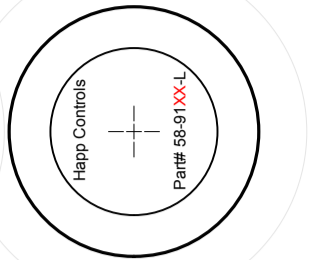 

Pause (P)

 Up

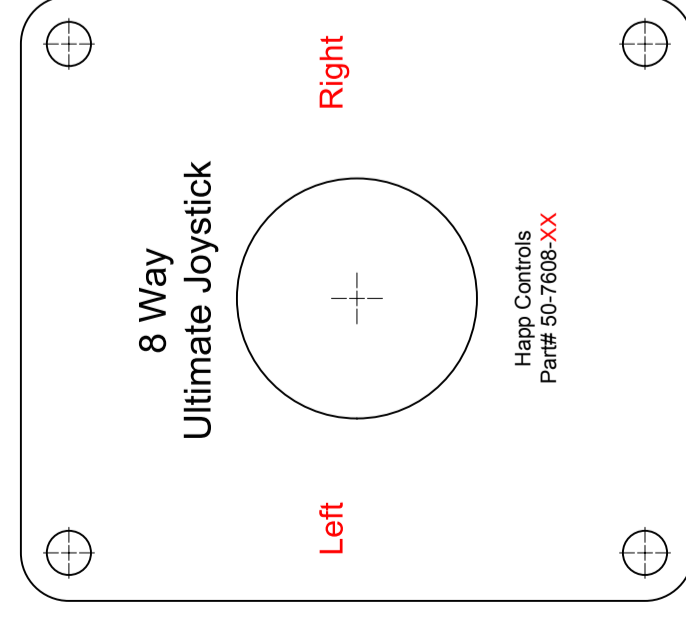


Left


Right

Down

 
Mame
Button 4

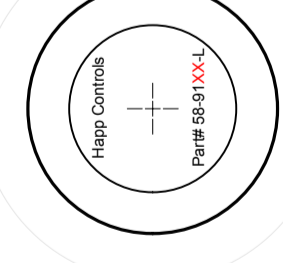

Mame
Button 5

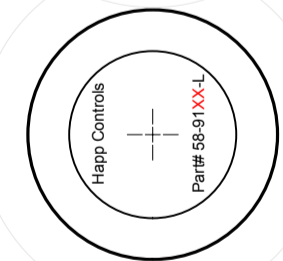 


Mame
Button 6

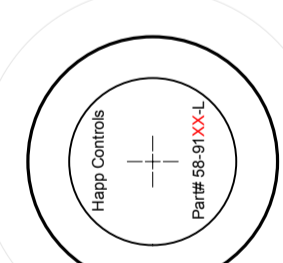 

Left Alt

SpaceBar

 Mame
Player 2 Up

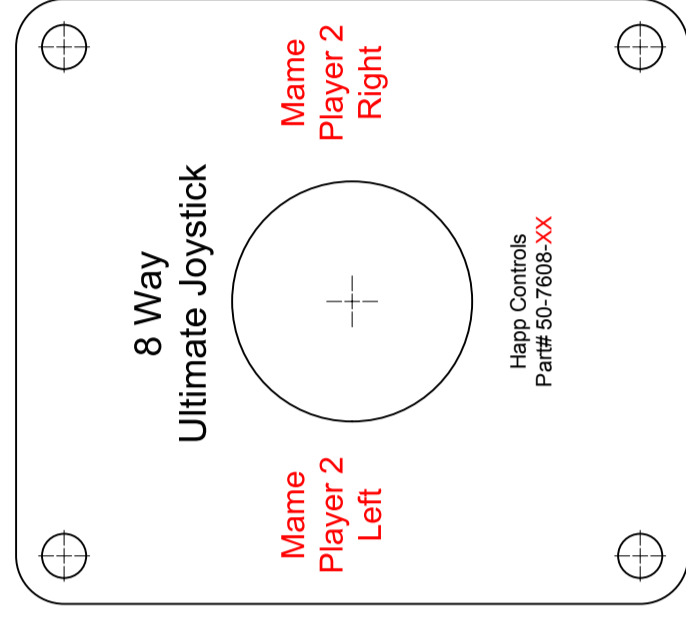


Mame
Player 2
Left


Mame
Player 2
Right

Mame
Player 2
Down

 
Mame
Player 2
Button 4

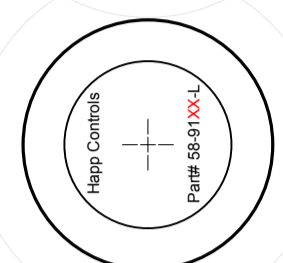


Mame
Player 2
Button 5

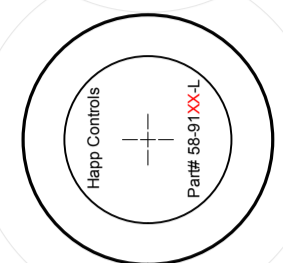 


Mame
Player 2
Button 6

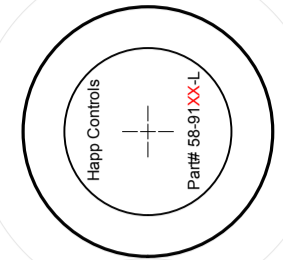 



Mame
Player 2
Button 1

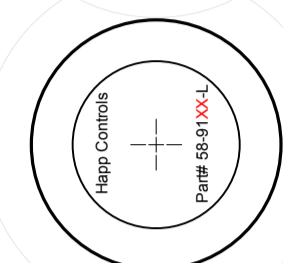 


Mame
Player 2
Button 2

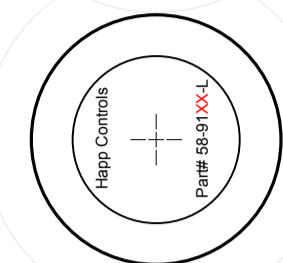 


Mame
Player 2
Button 3

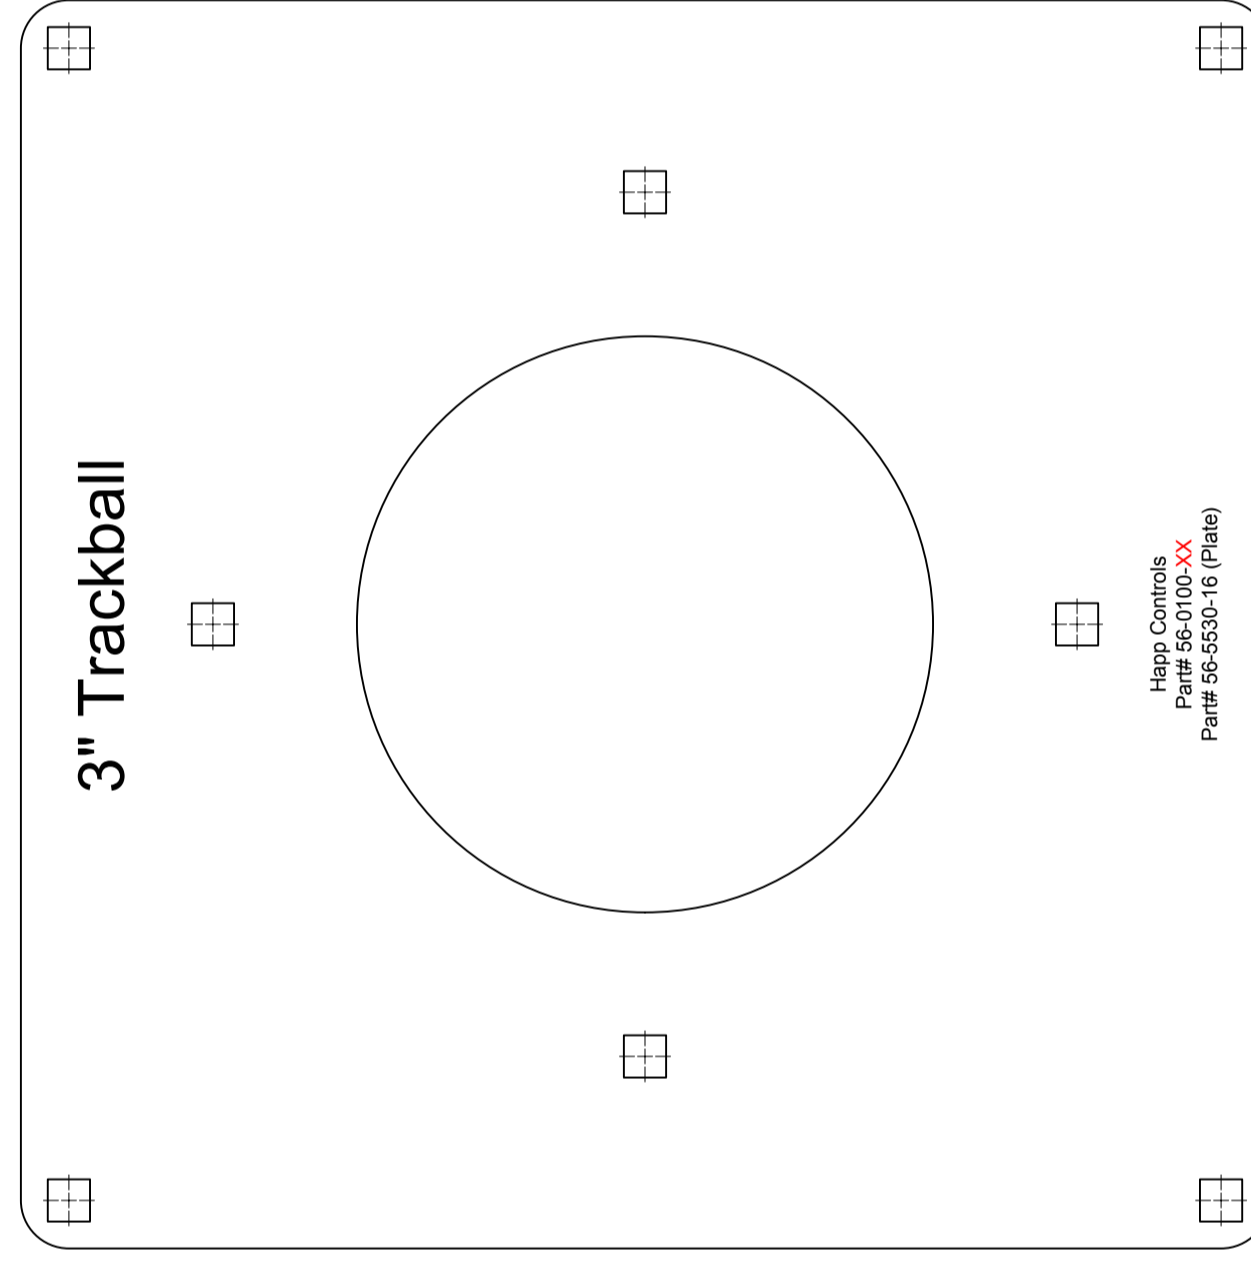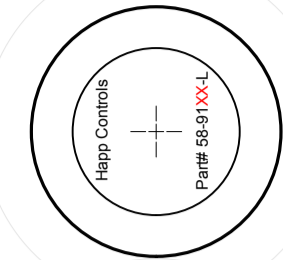  

 
Happ Controls
Part# 55-0700-XX
Part# 55-5550-16 (Plate)

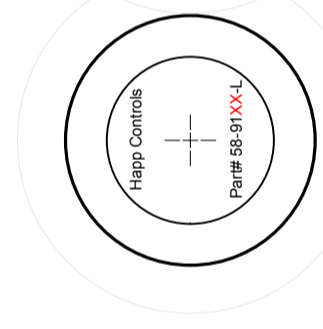

Mouse 1

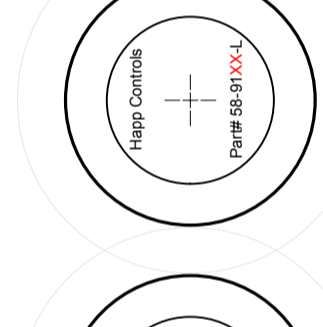 

Mouse 3

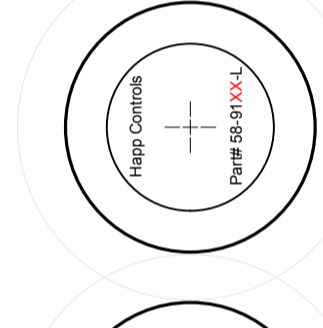 

Mouse 2

17"

32"